



Setup Instructions 9607 Series HiHat Stands

- A) Remove cardboard and plastic cover from pedal board and slide pedal frame into the Quick Release Rock Plate.
- B) Slide the Rock Plate frame stabilizing bracket into a forward position for solid positioning. Fig. 1
- C) Unfold and adjust legs to be flush to the ground. This will stabilize the pedal board.
- D) Screw the Upper Pull Rod (GP-0016) into the lower pull rod base stem. Fig. 2
- E) Place the Upper Height Adjust Tube (GP-0017) into the base and adjust to the desired position. Use the Hinged Memory Lock (GP-HML1) on the tube to retain this position.
- F) Place the bottom hihat cymbal onto the hihat stand Cup Felt (SC-HHCF) facing upwards.
- G) Place the top hihat into the Hi-Hat Clutch (GP-4420S), inserting it between the two small felts, and slide it onto the upper pull rod. Secure the upper hihat cymbal with the clutch leaving approximately 1" spacing between the upper and lower hihat cymbals then adjust to the desired spacing.
- H) Use the Step Tension Adjustment Lever on the base to change the spring tension. Fig. 3


Slide the *Rock Plate Stabilizing Bracket* into the forward position and tighten the wing nuts to secure the plate to the frame. Doing this will lock the frame onto the plate.

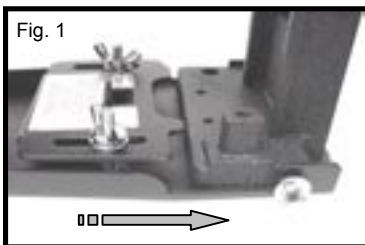

The *Step Tension Adjustment Lever* features a moveable collar. Each step up achieves a tighter spring tension. This allows the player to "dial in" the desired tension.

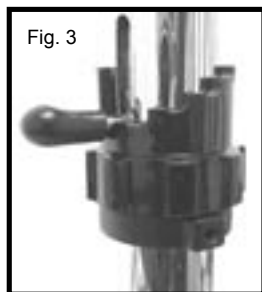

9607 Series Hi-Hat Stands

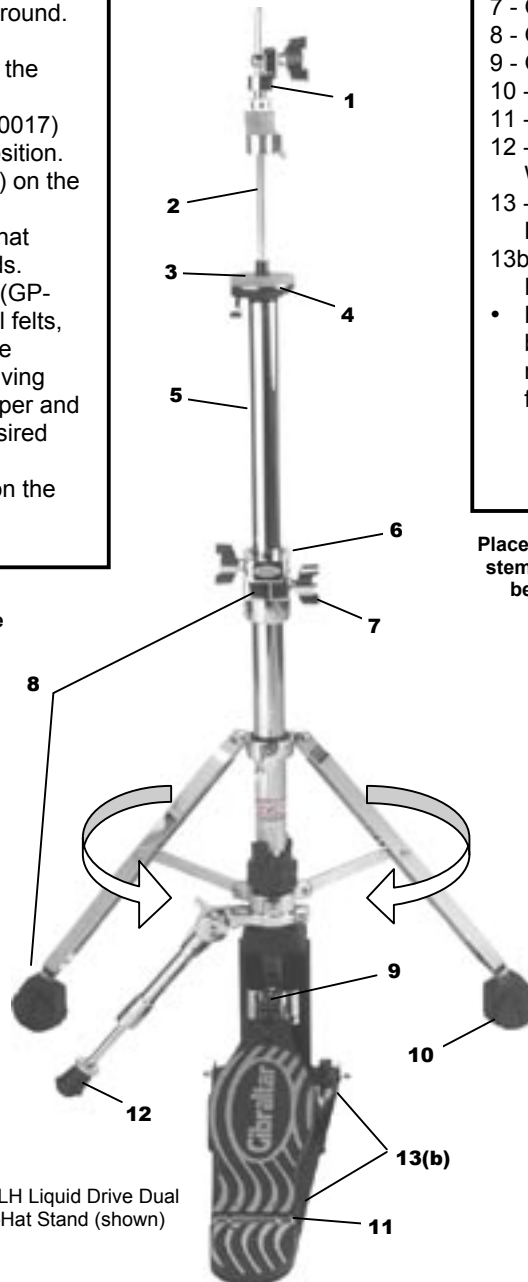


Replacement Part Numbers

- 1 - SC-4420S Hi-Hat Super Clutch
 - 2 - GP-0016 Upper Pull Rod
 - 3 - SC-HHCF Cup Felt
 - 4 - SC-HHFW Flat Washer
 - 5 - GP-0017 Upper Height Adjust Tube
 - 6 - GP-HML1 Hinged Memory Lock
 - 7 - GP-5117 Bolt Set, Long
 - 8 - GP-5165 Lower Base Assembly
 - 9 - GP-5006 Short Chain for LH Mechanism
 - 10 - SC-PC09 Round Rubber Foot
 - 11 - SC-2000 Pedal Board Hinge
 - 12 - GP-5220 Threaded Rubber Foot w/ Washer
 - 13 - GP-6025 Quick Release Rock Plate for LH Model HiHat Stands
 - 13b - GP-6026 Quick Release Rock Plate for Direct Pull Hi-Hat Stand
- Note - Some replacement parts may not be available for sale but for warranty replacement only. Please see your dealer for availability.

Place the *Upper Pull Rod* (GP-0016) into the open hole stem and screw it into the lower pull rod. This should be fairly snug to prevent the hihat cymbals from rotating.



The *Single Adjust Spike* on the underside of the frame prevents pedal movement and acts as an anchor spur on carpet. Use the key adjustment on the side to set the position.

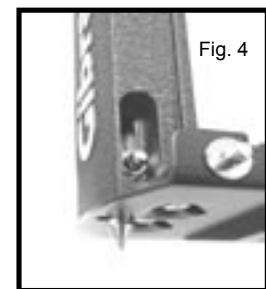

Check out the entire line of Gibraltar
Hardware products at ...
www.GibraltarHardware.com

